

V-LFP4850

Vision Technology delivers safe lithium iron phosphate Battery solutions for Telecom application.

Overview

The V-LFP4850 back-up lithium iron phosphate battery system is developed for backup of Telecom equipment. Under normal condition, grid AC power supply to rectifier module and the Telecom loads and charge battery pack; When the AC power fail, rectifier module stop power supply, the battery serves for Telecom equipment, to ensure the Telecom equipment runs normally; when the AC power is switched on again, power rectifier module for Telecom equipment recover to while charge the battery pack



Features

- RS485 communication output for monitoring
- Built-in BMS with Charging current limitation
- Built-in automatic protection for over-charge,
 Over-discharge and over-temperature conditions
- State of charge and state of health indication
- Built-in battery control for efficient operation
- Internal cell balancing
- Compatible with standard Telecom rectifiers
- Maintenance free

Specifications	V-LFP4850		
Nominal Voltage	48 V		
Nominal Capacity (@25°C , 0	50 Ah		
Number of cell	15 cell		
Battery Weight (Approximat	29.6 ±0.3Kg		
Dimensions (W*D*H)	Width*Depth* Height	(442mm*440mm*134.5mm) ±2	
	Normal energy (@25°C , 0.2C)	2400Wh	
Energy	Volumetric energy density	92Wh/L	
	Gravimetric energy density	82Wh/kg	
	Cell model	36130162LFP05	
Call	Cell Voltage (Nominal)	3.2 V	
Cell	Cell Capacity (Nominal)	50 Ah	
	Gravimetric energy density of cell	112 Wh/kg	
Internal Impedance @25°C	≤ 30mΩ		
Standard Discharge @25°C	Max. constant current	50A	
Standard Discharge @25 C	Cut-off voltage	42V	
Standard charge @25°C	Charge Voltage	52V ~ 54V	
	Max. constant current	25A	
	Recommended charging current and time	10A(0.2C) for 5.2 hours	
Discharge/Charge efficiency	≥ 95%		
Calendar life @25°C	≥ 12 years		
Cycle life (@ 25°C, 0.2C)	80% DOD 4000 cycles		
Operating temperature		Charging: 0°C ~ 55°C	
		Discharging: -10°C ~55°C	
Storage temperature	Recommended range: 0°C ~ 45°C		
Operating humidity (@40±2	5% ~ 95%		
Counting function of workin	YES		
Maintain port	YES (Option)		
Anti-theft	Customization screw (Option)		



BMS Parameters.

N	Туре		Function	Setting value	Remarks	
0.				V-LFP4850		
1	Charge	Cell Voltage Protection	3.7Alarm/3.8V Protection	Recover at 3.6V		
2	Charge		Total Voltage Protection	56Alarm/57V Protection	Recover at 54V	
3	- Voltage	D : 1	Cell Voltage Protection	2.8Alarm/2.7V Protection	Recover at 3.1V	
4	– Discha		Total Voltage Protection 43	43.2Alarm/42V Protection	Recover at 45V	
5		Charge	Normal	≤50A		
6			Normal	≤50A		
7	Current		Over Current Protection 1	Alarm>55A / Protection>60	Delay 20s ,recovery in every 1min	
		Discharge	Over Current Protection 2	>90A and $<$ 300A	Delay 3s ,recovery in every 1min	
8			Short Circuit Protection	≥300A	Delay 300uS	
9			Low temp protection	Charging $<$ -10°C Discharging $<$ - 20°C	Delay 1~2S	
10	Cell Temp		High temp protection	Charging: Alarm >65°C/70°C Protection Discharging: Alarm>70°C/75°C Protection	Delay 1~2S	
11	11	РСВ	High temp protection	Alarm>90°C/>115°C Protection	Recovery at 85°C	
12	Cell Balance	Balance	Make all cells be balance during charging process. Current: 150mA	V _{Max} .≥3.40V and V _{Max.} - V _{Min} ≥40mV, Start balance	All cell voltages $<3.4V$ or V _{Max.} - V _{Min} \leq 40mV, or discharge Stop balance	

Battery Status.

- 1. **Stop/Transport Mode**. In working mode, press Start/Stop button, Battery will go to STOP mode with low self-discharge. In STOP mode, charging MOS and discharging MOS are open, battery cannot charge, discharge or communicate.
- 2. Working Mode. In STOP mode, connect the battery to SMPS, press Start/Stop button, battery will go to working mode. In working mode, BMS will monitor battery voltage, current, and temp, and communication is available, charging MOS and discharging MOS are closed, Battery will operate as the settings.
- 3. **Sleep Mode**. After turn on the battery, if the battery voltage below low voltage protection, BMS will go to sleep mode in 1 minute. In sleep mode, charging MOS and discharging MOS are closed, BMS will check the current in every 1 min, if there is charging current connecting, battery will turn to working mode.
- 4. Error Mode. In working mode, if there is: ①. Battery cells, ΔU>1V, or ②. Any cell voltage>3.9V or <2.3V, or ③. Battery temp is <-20°C or +75°C. BMS will go to error mode, ALM will bright and other LED will shut down, and go to STOP mode, charging MOS and discharging MOS are open. Need to make troubleshoot.




Performance Curve.

8500

7000


5500


4000

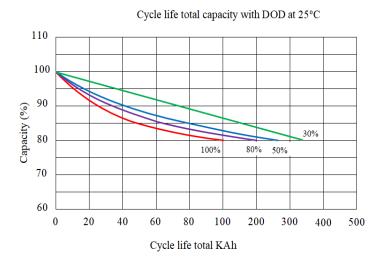



Cycle life versus depth of discharge and temperature

Self-discharge at different temperature

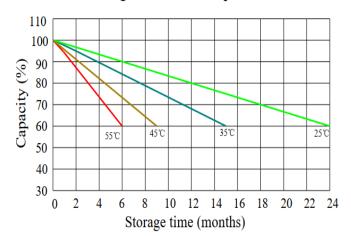

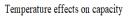

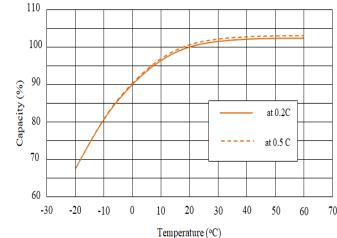

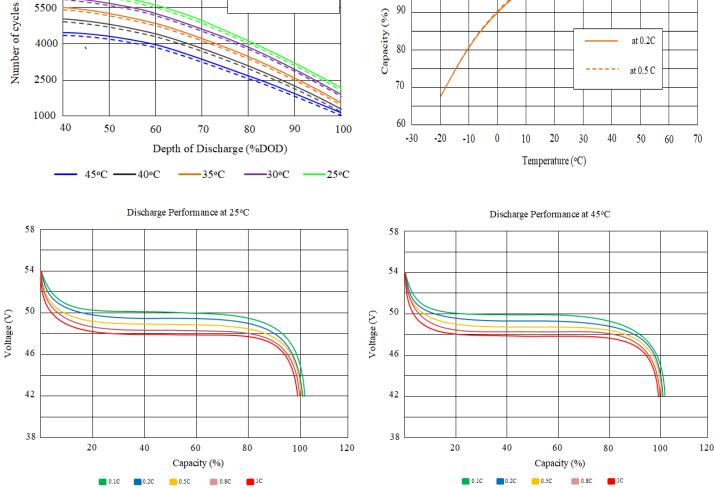

at 0.2C

at 0.5 C

Performance may vary depending on, but not limited to cell usage and application. If cell is used outside specifications, performance will diminish. All specifications are subject to change without notice. All information provided herein is believed, but not guaranteed, to be current and accurate.